

301126439  
SLIMBOX-NDRGRND-TERM, 16-SPLICE TRAY-SF

1. Assembly Instruction

1.1. Press the tray so that it fits into the indicated holes (Figure 1).

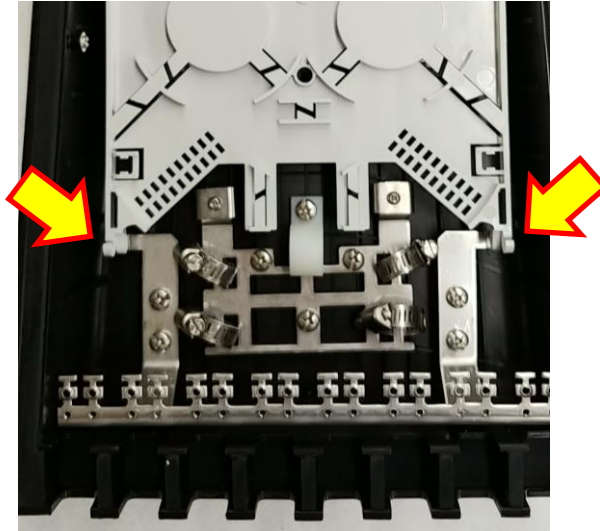


Figure 1

1.2. If a splice tray is already installed, simply fit the second hooks into the cylinders of the lower tray.

1.3. Place the screw into the center hole of the splice tray and thread the screw into the Optical Terminal Box (Figure 2).



Figure 2