


Pre-Terminated Cable Installation Instructions for FD7, FD8 and FH8 Panels

This instruction applies to mounting OFS Preconnectorized cables to FDF Panels.

Place the mounting clamp around the transition piece located between the cable and the yellow jacketed ribbons as shown

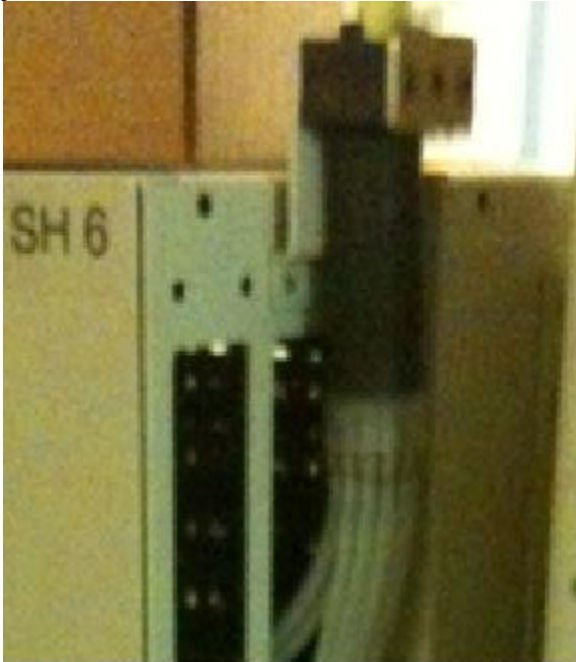

The transition piece has a label showing which side to face toward the panel.



For FD7 cables of 72 or fewer fibers, FD8 cables of 96 or fewer fibers and 144 fiber FH8 cables all ribbons will feed into one shelf.

For 144 fiber FD7 & FD8 cables, ribbons 7-12 will feed into the upper shelf and ribbons 1-6 will feed into the lower shelf.

For 216 fiber FD7 & FD8 cables, ribbons 13-18 will feed into the upper shelf, 7-12 into the middle shelf and 1-6 into the lower shelf as shown below:



CAUTION
Overtightening the ribbons to the shelf
can damage fibers.
DO NOT OVERTIGHTEN


Note: ribbons are shown with clear tube. Production ribbons will be in yellow tubing.

Ribbon and Connector identification are shown below.

The yellow covers protecting the ribbons have labels with the ribbon number for easy identification.



The ribbon-to-individual fiber transitions have labels with the ribbon and fiber numbers and holes for locating in the panel.

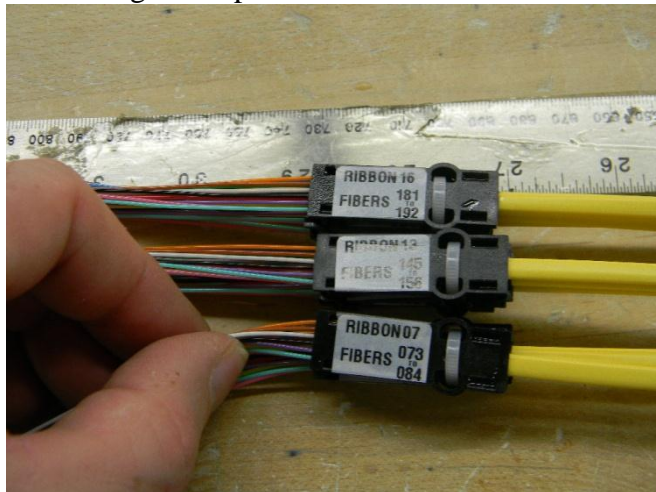

At the end of each ribbon the connectors will be in a bag labeled as shown below.

