



Installation Instructions

Angled Shielded SC Singlemode Adapters

1. With the angled adapter rotated back about 30 degrees from the faceplate, approach the rear of the faceplate.

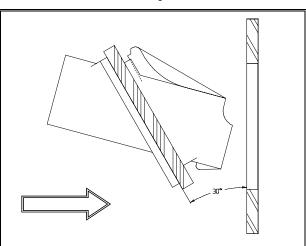


2. While placing the adapter through the faceplate opening, hook the adapter on the bottom of the faceplate opening.

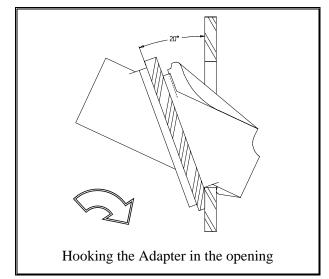


3. Rotate the adapter toward the faceplate, compressing the retaining latch(es) and the EMI Shield.

Approaching the rear of the Faceplate

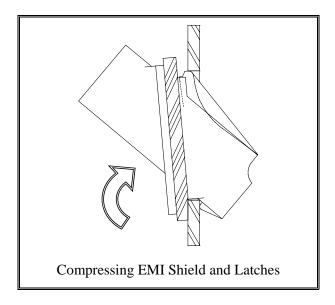

4. While applying downward pressure to the adapter, continue rotating the adapter toward the faceplate, until the latch(es) clear the panel opening and catch on the upper edge.

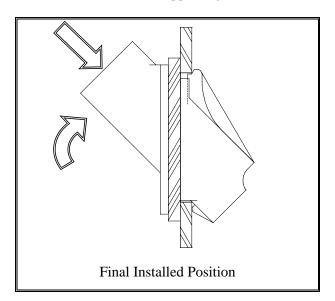


5. Apply upward pressure on the front face of the adapter, sliding it up. This insures full overlap of the latch(es) on the faceplate.

Installation Hint: When installing adapters into faceplates at the upper end of the thickness range, apply installation pressure to the ends of the installed dust covers.


Note: Limit the amount of adapter handling during installation, as finger oils can negatively effect the EMI shielding effectiveness of the adapter assembly. The use of gloves is highly recommended.

apter Mounting Dimensions

Adapter Mounting Dimensions

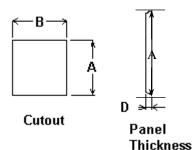

Dimension	Minimum	Maximum
	mm (in.)	mm (in.)
A	17.73 (.698)	17.83 (.702)
В	13.26 (.522)	13.36 (.526)
D	1.55 (.061)	1.75 (.069)
Horizontal	18.04 (.710)	18.54 (.730)
Spacing		
Vertical	22.86 (.900)	23.36 (.920)
Spacing		

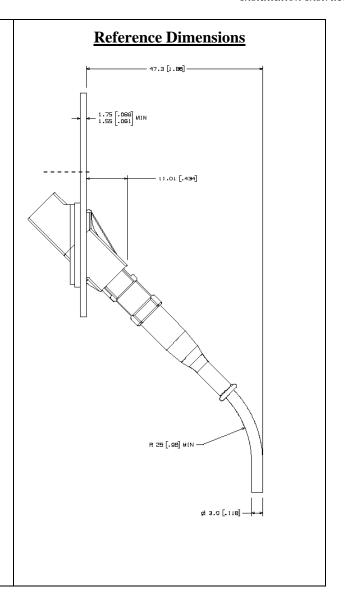

General SC Product Information

SC Connector Cleaning Instructions

- 1. Dampen a wipe with isopropyl alcohol (91% 2-propanol + water).
- 2. Clean the end of the ferrule with the dampened wipe.
- 3. Blow the ferrule dry with low-velocity clean compressed air.

Caution: Signal performance will be affected if the connector tip is not thoroughly cleaned.

SC Adapter Cleaning Instructions

- 1. If access to the adapter is only available from one side, use low-velocity clean compressed air to blow inside of the adapter.
- 2. If access is available from both sides of the adapter, clean the adapter with the SC adapter brush moistened with alcohol followed by low-velocity compressed air. The brush can be cleaned with alcohol and compressed air.

<u>Warning:</u> **DO NOT** try to clean the adapter with the adapter brush if a connector is mounted in the adapter. For more information, contact your OFS Fitel Sales Representative or call 1-800-344-0223.

For fiber-optic technical assistance, call 1-888-FIBERHELP (1-888-342-3743) or contact your OFS Representative.